Register your product and get support at
www.philips.com/welcome

FC8459-FC8450

PHILIPS

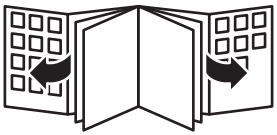

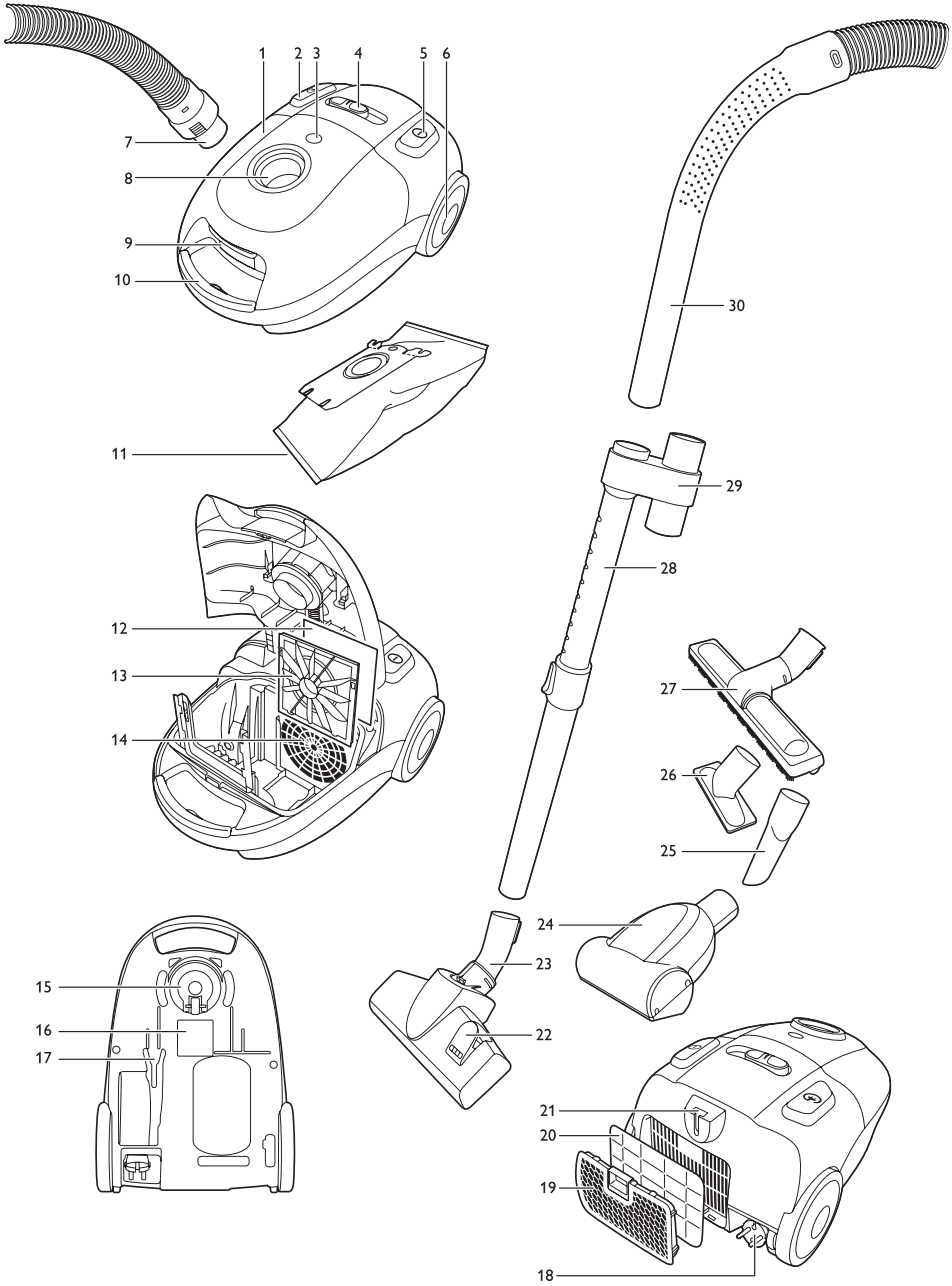
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30

ENGLISH 6
DANSK 11
DEUTSCH 16
ΕΛΛΗΝΙΚΑ 22
ESPAÑOL 28
SUOMI 33
FRANÇAIS 38
ITALIANO 43
NEDERLANDS 48
NORSK 53
PORTUGUÊS 58
SVENSKA 64
TÜRKÇE 69

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

1 Cover
2 Cord rewind button
3 Dustbag full indicator
4 Electronic suction power control
5 On/off button
6 Rear wheel
7 Hose connector
8 Hose connection opening
9 Cover release tab
10 Handle
11 Dustbag
12 Motor protection filter
13 Motor protection filter holder
14 Motor inlet
15 Swivel wheel
16 Type plate
17 Storage slot
18 Mains cord with plug
19 Exhaust micro filter grille
20 Exhaust micro filter
21 Parking slot
22 Rocker switch for carpet/hard floor settings
23 Combination nozzle
24 Mini turbo brush (specific types only)
25 Crevice nozzle (specific types only)
26 Small nozzle (specific types only)
27 Hard floor nozzle (specific types only)
28 Telescopic tube
29 Accessory holder (specific types only)
30 Hose with handgrip

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Never suck up water or any other liquid. Never suck up flammable substances and do not suck up ashes until they are cold.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the mains cord, the plug or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not point the hose, the tube or any other accessory at the eyes or ears nor put it in your mouth when it is connected to the vacuum cleaner and the vacuum cleaner is switched on.
- Do not clean any part of the vacuum cleaner in the dishwasher.

Caution

- Do not suck up large objects as this may cause the air passage in the tube or hose to become obstructed.
- When you use the vacuum cleaner to vacuum ashes, fine sand, lime, cement dust and similar substances, the pores of the dustbag and the motor protection filter become clogged. If you notice a strong decrease in suction power, replace the dustbag and clean the motor protection filter.
- Never use the appliance without a dustbag or the motor protection filter. This could damage the motor and shorten the life of the appliance. Only use Philips s-bag® dustbags or Philips reusable dustbag.
- Do not use the mini turbo brush on pets.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Preparing for use

Hose

1 To connect the hose, push the hose connector into the hose connection opening ('click') (Fig. 2).

2 To disconnect the hose, press the release buttons (1) and pull the hose connector out of the hose connection opening (2) (Fig. 3).

Telescopic tube

Note: You can connect any of the nozzles or accessories to the handgrip or to the tube. To do this, insert the handgrip or tube into the nozzle or accessories while turning a little.

1 Push the handgrip into the suction tube. (Fig. 4)
To remove it, turn the handle slightly and pull it off the tube.

2 Adjust the telescopic tube to the length you find most comfortable during vacuuming. Press the slide on the tube (1) and push the lower tube part downwards or pull it upwards (2) (Fig. 5).

Combination nozzle

You can use the combination nozzle on carpet (with the brush strips folded in) or on hard floors (with the brush strips folded out).

Hard floor nozzle (specific types only)

- The hard floor nozzle is designed for gentle cleaning of hard floors (Fig. 6).

Accessory holder (specific types only)

1 To store accessories in the accessory holder, push them onto the holder (Fig. 7).

Mini turbo brush (specific types only)

The mini turbo brush is specially designed for effectively picking up animal hairs and fluff from furniture and mattresses.

Crevice nozzle and small nozzle (specific types only)

- Use the crevice nozzle to clean narrow corners or hard-to-reach places.
- Use the small nozzle to clean small areas, e.g. the seats of chairs and sofas.

Using the appliance

Vacuum cleaning

1 Pull the cord out of the appliance and insert the mains plug into the wall socket.

2 Press the on/off button on top of the appliance with your foot to switch on the appliance (Fig. 8).

Note: If you want to pause for a moment, insert the ridge on the nozzle into the parking slot to park the tube in a convenient position (Fig. 9).

Adjusting suction power

- You can adjust the suction power with the electronic suction power control on the vacuum cleaner (Fig. 10).

Cleaning and maintenance

The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

1 Clean the appliance and its parts with a damp cloth.

Do not clean any part of the vacuum cleaner in the dishwasher.

Cleaning the motor protection filter

To maintain optimal performance, clean the motor protection filter at least once a year.

1 Pull the cover upwards to open it (Fig. 11).

2 Lift the dustbag out of the appliance (Fig. 12).

3 Pull the filter holder with the motor protection filter out of the appliance (Fig. 13).

4 Take the motor protection filter out of the holder and shake the motor protection filter over a dustbin to clean it.

5 Put the filter in the filter holder and slide the filter holder back into the appliance.

6 Put the dustbag back into the appliance, and close the cover.

Cleaning the mini turbo brush (specific types only)

To clean the brush inside the mini turbo brush, follow the steps below:

1 Switch off and unplug the appliance.

2 Rotate the brush inside the mini turbo brush until the cutting groove faces you. Use a pair of scissors to cut the hairs, threads etc that have collected around the brush. (Fig. 14)

3 Remove fluff, hairs and other dirt from the brush.

Emptying the reusable washable dustbag (specific countries only)

In some countries, this vacuum cleaner comes with a reusable washable dustbag. You can use this dustbag instead of disposable dustbags. To remove and insert the reusable dustbag, follow the instructions in chapter 'Replacing the dustbag'.
To empty the dustbag:

1 Slide the clip off the dustbag sideways.

2 Shake out the contents into a dustbin.

3 To close the dustbag, slide the clip back onto the bottom edge of the dustbag.

Replacement

The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

Replacing the disposable dustbag

- Replace the dustbag as soon as the dustbag-full indicator has changed colour permanently, i.e. even when the nozzle is not placed on the floor (Fig. 15).

1 Pull the cover upwards to open it and tilt the dustbag holder forward. (Fig. 11)

2 Pull at the cardboard tag to remove the full dustbag from the holder (Fig. 16).
◗ When you do this, the dustbag is sealed automatically.

3 Slide the cardboard front of the new dustbag into the two grooves of the dustbag holder as far as possible (Fig. 17).

4 Tilt the dustbag holder backward (Fig. 18).

Note: If no dustbag has been inserted, you cannot close the cover.

5 Push the cover downwards to close it.

Replacing the exhaust micro filter

Always unplug the appliance before you replace a filter.

Replace the exhaust micro filter every 12 months.

1 The plug must be removed from the socket-outlet.

2 Open the exhaust micro filter grille.

3 Remove the filter and place the new filter in the appliance.

4 To close the exhaust grille, first align the lugs on the bottom of the grille with the slots in the appliance (1). Then press the tab back on the appliance until the grille locks into place (2) ('click') (Fig. 19).

Ordering accessories

To purchase accessories for this appliance, go to your Philips dealer, Philips service centre or contact the Philips Consumer Care Centre in your country. You can also visit **www.philips.com/support**.

Ordering dustbags

- Philips Classic s-bag® synthetic dustbags are available under type number FC8021.
- Philips Clinic s-bag® high filtration synthetic dustbags are available under type number FC8022.
- Philips Anti-odour s-bag® synthetic dustbags are available under type number FC8023.
- Reusable washable dustbags (some countries only) are available under code number 4322 004 93701.

Note: Please visit www.s-bag.com for more information about the s-bag.

Ordering filters and accessories

- Exhaust micro filters are available under service number 4322 004 93681.
- Motor protection filters are available under service number 4322 004 93671.

Storage

1 Switch off and unplug the appliance, and press the cord rewind button to rewind the cord (Fig. 20).

2 Put the appliance in upright position. To attach the nozzle to the appliance, insert the ridge on the nozzle into the storage slot.

Note: To ensure stable storage of the telescopic tube, adjust the tube to the shortest length.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 21).

Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country. You find its phone number in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Troubleshooting

1 The suction power is insufficient
- Perhaps the dustbag is full.

If necessary, replace or empty the dustbag.
- Perhaps the filters need to be cleaned or replaced.

If necessary, clean or replace the filters.
- Perhaps the electronic suction power control is set to a low setting.

Set the control to a higher setting.
- Perhaps the nozzle, tube or hose is obstructed.

Remove the obstruction.

2 Specific types only: hairs are entangled around the brush inside the mini turbo brush.
- Clean the mini turbo brush. See chapter 'Cleaning', section 'Cleaning the mini turbo brush'.